

N800A 프레임 통합 펌웨어 현황 및 확인방법
Intregated Firmware Status and Verification Method for N800A
Frame

드라이브시스템부
Drive System Dep't

개정이력/Revision History

| Revision | Date | 비 고/Remarks |
|-----------------|--------------|---------------------|
| 1 st | 2015. 12. 16 | |
| 2 nd | 2016. 03. 11 | Included MR10 Frame |
| | | |
| | | |
| | | |
| | | |

1. 개요

본 문서는 N800A 프레임의 통합된 최신 펌웨어의 현황과 키패드나 HIMS로 펌웨어를 확인하는 방법에 대하여 기술한 문서임.(제품의 펌웨어가 최신버전과 상이한 경우 1544-5011로 A/S 신청 바람.)

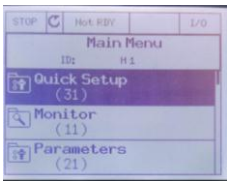
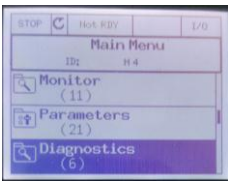
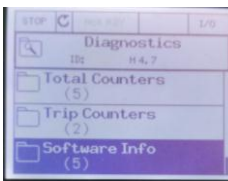

This document describes the integrated latest firmware status and how to check the firmware using keypad and HIMS tool for N800A Frame.(If your product is differ from the latest version, you contact us please.)

2. 개정이력(The revision history)

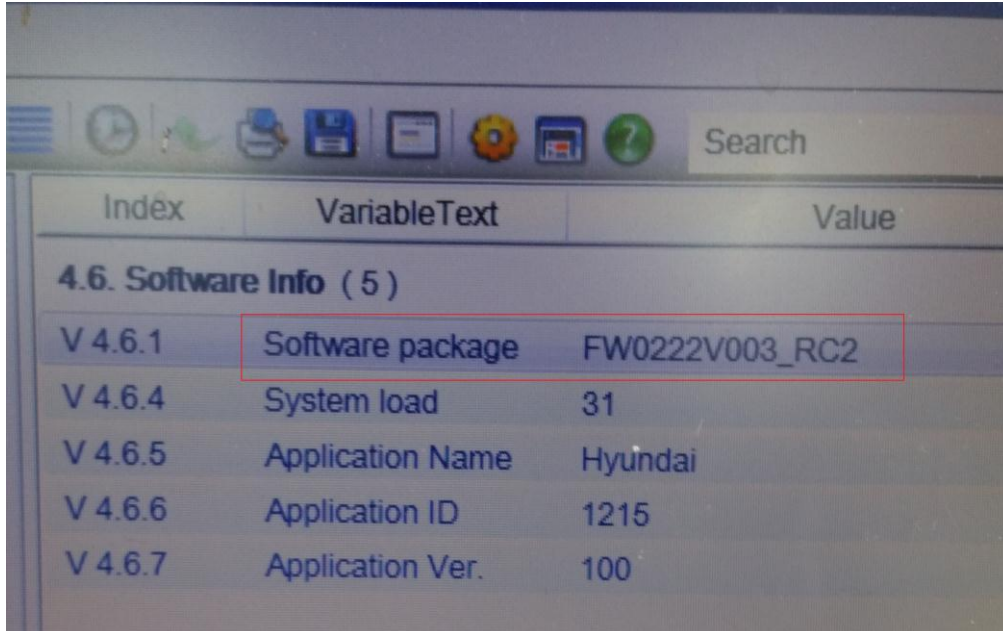
| 순서 No. | 최신 버전 The latest version | 개정 내용 Revision Contents | 적용시점 Application time |
|-----------|-----------------------------|--|--------------------------|
| 1 | FW0222V002.vcx | 1. 최초 출고 버전 1. The first version | 2015. 06. 01 |
| 2 | FW0222V003_RC2.vcx | 2. MR9 이하 및 MR10 통합 버전 2. Integrated version in N800A | 2016. 03. 11 |

3. 펌웨어 확인방법(How to check the firmware version)

(1) 키패드로 확인방법(Using Keypad)

| 경로/Menu or Path | 표시/Display |
|--|---------------------|
| "MainMenu"(1) → DOWN → "Diagnostics"(2) → OK → DOWN → "Software Info"(3) → OK → "Software Package"(4) → OK → "FW0222V003_RC2" | 그래픽 LCD/Graphic LCD |
| <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;">  <p>(1)</p> </div> <div style="text-align: center;">  <p>(2)</p> </div> <div style="text-align: center;">  <p>(3)</p> </div> <div style="text-align: center;">  <p>(4)</p> </div> </div> | |

(2) HIMS로 확인방법(Using HIMS tool)



| Index | VariableText | Value |
|---------------------------------|------------------|----------------|
| 4.6. Software Info (5) | | |
| V 4.6.1 | Software package | FW0222V003_RC2 |
| V 4.6.4 | System load | 31 |
| V 4.6.5 | Application Name | Hyundai |
| V 4.6.6 | Application ID | 1215 |
| V 4.6.7 | Application Ver. | 100 |